

PROGRAMMING GUIDE

TEC1A SERIES

**Covers: T1A2LxxxBSK/DLX/PRM
T1A4LxxxBSK/DLX/PRM**

**Select Engineered Systems, Inc.
7991 West 26th Ave
Hialeah, FL 33016**

Tel: 305 823 5410


Fax: 305 823 5215

www.selectses.com

© 2003 – 2020 All Rights Reserved

MAIN MENU

- 1 CODES & NAMES**
- 2 ENT. CONTROL**
- 3 SYS. PARAM.**
- 4 TITLE PAGE**
- 5 CLOCK SETUP**
- 6 SITE CODES**
- 7 LOG DATA**
- 8 CLEAR DATA**
- 9 DISPLAY DATA**

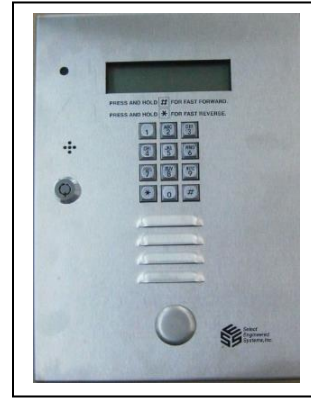

1- CODES & NAMES- DIRECTORY RECORDS

1-ADD/EDIT- This is the sequence of adding, editing and deleting RECORDS on the directory.

E = Entrance/Door number 1= ENT 1 2=ENT 2 3=ENT 1 & 2
T= Time group number T = (1-7) T = 0 (24/7)

CODE	NAME	PHONE	PIN	ET	CARD1 ET	CARD2 ET	CARD3 ET	CARD4 ET
0100	Nick R.	5551234567	1234	10	12345 20	23456 30	00001 32	00025 11

- 2- FIND NAME –** Search for a name in the directory, and find the code location number
- 3- FIND PIN-** Search for a pin programmed and gives you the code location number
- 4- FIND CARD-** Search for a card programmed and gives you the code location number
- 5- CODES USED-** Shows how many codes are already in used from the total memory cap.
- 8- ENABLE PINS-** Pins capability 0 = disable / 1 = enable
- 9- ENABLE CARDS-** Cards capability and diagnostic mode.
0 = disable / 1 = enable / 2 = diagnostic (will show card info on Display)

2- ENT. CONTROL- ENTRANCE CONFIGURATION

DEFAULTS

1. ENT 1 TIME -	Door 1 time	(01 – 99) sec	10
2. ENT 1 TONE -	Door 1 open tone	(0 – 9) tone 0 = off	6
3. ENT 1 LATCH-	Door 1 hold open tone	(0 – 9) tone 0 = off	0
4. ENT 1 GP SHD-	Auto unlock Time Sched Group	(0 – 7) TG 0 = none	0
5. ENT 2 TIME-	Door 2 time	(01 – 99) sec	10
6. ENT 2 TONE -	Door 2 open tone	(0 – 9) tone 0 = off	0
7. ENT 2 LATCH-	Door 2 hold open tone	(0 – 9) tone 0 = off	0
8. ENT 2 GP SHD-	Auto unlock Time Sched Group	(0 – 7) TG 0 = none	0

3- SYS. PARAM. - SYSTEM PARAMETERS
DEFAULTS

1- CODE LEN-	Directory code size	(1 – 4) digit code	3
2- TALK TIME -	Time talking after connect	(1 – 9) min	1
3- RING COUNT-	# of rings to answer	(0 – 9) 0 = off	3
4- STRIKE OUT -	# of pins attempt	(0 – 9) 0 = disable	3
5- KEYPAD ON-	After call placed	0 = disable / 1 = KP active	0
6- SPKR TONE -	Tone to enable SPKR	(0 – 9) 0 = disable	0
7- PSWD-	Programming password	(6 Digits)	777777
8- SER NUM -	Unit serial number	(6 Digits)	2xxxxx

4- TITLE PAGE - DISPLAY MESSAGES

- 1- **TITLE PAGE** 2 line programmable / 4 line programmable Display message
- 2- **DISP TYPE** 1 = 2 line display / 2 = 4 line display Size

5- CLOCK SETUP

- 1- **CLOCK** Set <min (00-59)/hour (00-24)/day (Sun 1-Sat 7)/date (DD/MM/YY)>

05:58 01/02/20 2 CLK: 5:58 am Jan 2 2020 Monday
 17:30 01/10/20 6 CLK: 5:00 pm Jan 10 2020 Friday

- 2- **TIME SCHEDULES** (0 – 24) hours start and end times / (1 – 7) week days

SCHED	STIME	ETIME	SMTWTFSH
0	06:00	17:30	-23456-from 6:00 am to 5:30 pm Mon-Fri
1	08:00	12:00	1-----7 from 8:00 am to Noon Sun & Sat

- 3- **HOLIDAYS** (0-9) 10 holidays

HOL	MONTH	DATE	Description
0	06	04	Jul 4
1	12	25	Dec 25

- 4- **TIME SCHED GROUP** (1-7) 7 group of time schedules

GRP	TSCHEID	Description
	01234567	
1	0-----	Group 1 will follow Time Schedule 0
2	-1-----	Group 2 will follow Time Schedule 1
3	01-----	Group 3 will follow Time Schedule 0 & 1

6- SITE CODES - SC = Facility codes

1- SIDE CODE (0-9) 10 facility codes

SITE CODE 0 001 Location 0 SC=001

SITE CODE 1 255 Location 1 SC=255

7- LOG. DATA - BUFFER CONTROL

1- VIEW LOG Shows log transactions by page

2- SEND LOG Shows all transactions

3- LOG SIZE Shows numbers of events and buffer space available

4- CLEAR LOG Erase log 0 = no / 1 = yes

8- CLEAR DATA (In all erase options 0 = no / 1 = yes)

1- SET PARAMETERS Set all parameters back to factory defaults

2- CLR TIMESCHEDS Erased all times schedules

3- CLR HOLIDAYS Erased all holidays

4- CLR TS GROUPS Erased all time groups

5- CLR SITE CODES Erased all sites codes

6- SET TITLE PAGE Set title page back to factory defaults

9- DISPLAY DATA

1- SHOW INFO Shows main parameters on computer screen

VER 2.58

CODE/NAME CAPACITY = 0051

CODE LEN = 3

ENABLE PINS = 0

ENABLE CARDS = 0

PRESS # TO SEE THE
NAMES THEN DIAL THE
CODE TO THE RIGHT
OF THE NAME

PASSWORD = 777777

<CR> TO CONTINUE